

# DIRECTIONAL SPOOL VALVE ELECTRICALLY OPERATED TYPE WE6 SERIES 32


size 6 | up to 35 MPa | 80 dm<sup>3</sup>/min

WK 420 970


Directional spool valves type **WE6** electrically operated are intended for change in direction of fluid flow in a hydraulic system and thus it allows to change direction of movement of a receiver – mostly piston rod of a cylinder or hydraulic motor as well to use functions: on and off. These directional spool valves are used for subplate mounting in any position in a hydraulic system.

Directional spool valve is complied with the regulations of directive **2006/95/WE** for the following voltages:

**50 – 250 V for AC**  
**75 – 250 V for DC**

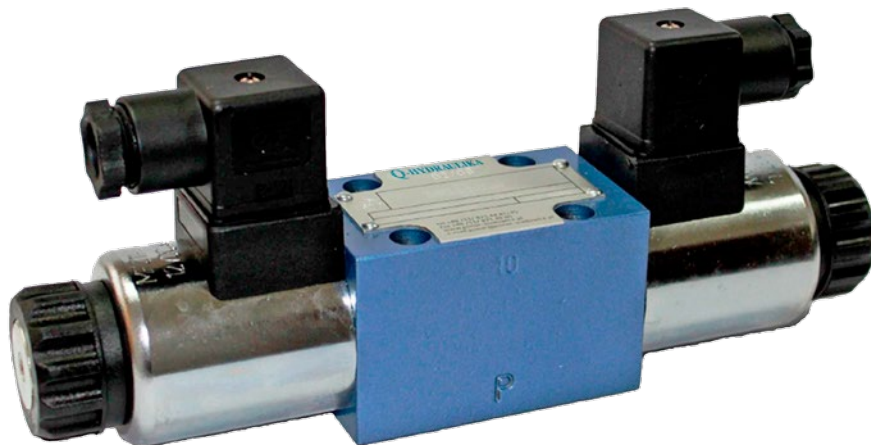

## DESCRIPTION OF OPERATION

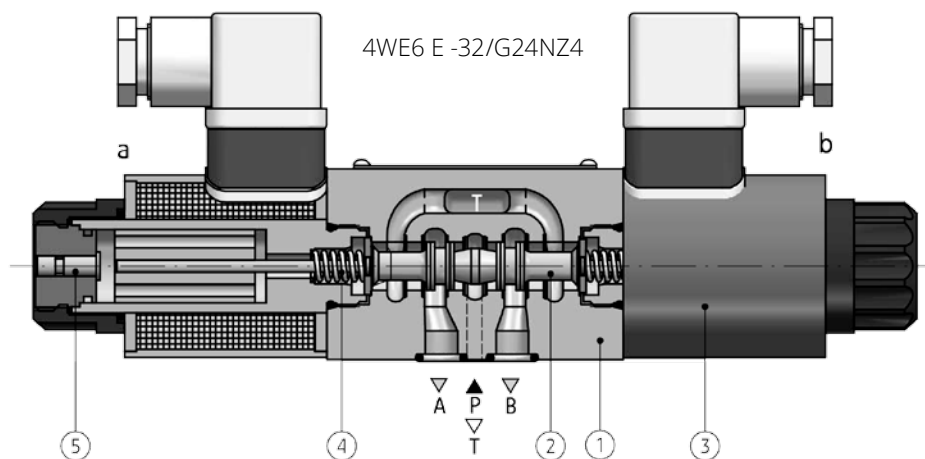


Main elements of directional spool valve type **WE6** are: housing (1), solenoids (3), control spool (2), centering springs (4) and manual overrides (5). The spool (2) is shifted when it is moved into one of end positions by the force of solenoid (3) affecting it. The return of the spool into neutral position and centering are secured by the centering springs (4). The shape of the spool (control edge spacing) affects the configuration of connections among the ports: **A, B, P** and **T**.

Function of ports:

**P** – supply port  
**T** – oil return to the tank  
**A, B** – ports for a receiver


In case of emergency, the spool can be shifted manually by means of the override (5) – only for version with manual override.

When the situation is anticipated, directional spool valve must be mounted in the way as to be available.

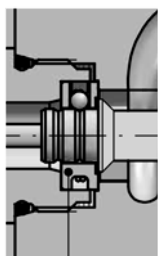


Version WE6.../OF only for spools: **A, C, D**. 2-position directional spool valve without return springs with detent. The spool (2) is positioned and supported with detent (6), and its shift results from supplying voltage to one solenoid (3).

6

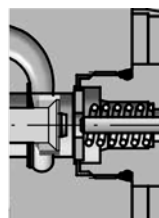

Version WE6.../O only for spools: **A, C, D**. 2-position directional spool valve without return springs. The spool is positioned and supported with attached solenoid. There is no neutral position as the spool is not positioned.

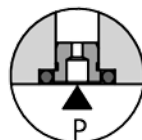

Version WE6.../...**B**... – directional spool valve designation like that, has throttle insert in port **P**.

## TECHNICAL DATA




Hydraulic fluid	mineral oil		
<b>Required fired fluid cleanliness class</b>	<b>ISO 4406 class 20/18/15</b>		
Nominal fluid viscosity	37 mm/s at temperature 55° C		
Viscosity range	2,8 up to 380 mm/s		
Fluid temperature range (in a tank)	recommended	40° C up to 55° C	
	max.	-20° C up to +70° C	
Ambient temperature range	-20° C up to +50° C		
<b>Maximum operating pressure</b>	<b>Ports P, A, B</b>	<b>35 Mpa</b>	
	<b>Port T</b>	<b>21 Mpa</b>	
Flow section for spool <b>W</b> in central position (schemes on page 4)	3% nominal flow		
Weight	with 1 solenoid	WE6...- 1,5 kg	WE6...H...- 2,8 kg
	with 2 solenoids	WE6...- 2,1 kg	WE6...H...- 3,4 kg
<b>Supply voltage of solenoids</b>	<b>DC</b>	<b>AC</b> (plug-in connector with rectifier)	
	<b>12 V 24 V 110 V</b>	<b>230 V - 50 Hz</b>	<b>220 V - 50 Hz 110 V - 50 Hz</b>
Supply voltage tolerance	±10%	±10%	
Power requirement (DC)	30 W	-	
Holding power (AC)	-	50 VA	
Switch-on power (AC)	-	300 VA	
Switching time	ON up to 60 ms	ON up to 40 ms	
	OFF up to 40 ms	OFF up to 25 ms	
Maximum switching frequency	15000 on/h	12000 on/h	
<b>Degree of protection</b>	<b>IP 65</b>		
Solenoid coil temperature	max. 150° C		

## CELKOVÉ A PŘIPOJOVACÍ POŽADAVKY

1. Only fully functional and operational valve, properly connected to electrical installation must be used. Connecting or disconnecting the valve to an electrical installation must only be carried out by qualified personnel.
2. Ground connection ( $\perp$ ) must be connected with protective earth wire (PE  $\perp$ ) in supply system according to appropriate instructions.
3. Solenoid plug shall precisely adhere to socket and shall be secured with thread bolt screwed in securely in a place. It is forbidden to operate it is forbidden to operate the valve if the tightness and suitable clamp of cable in the plug gland are not ensured.
4. For the ...W230 - 50... valves, simultaneous joining of two solenoids of the same valve should not be permitted (partial overriding of the valve can overheat and damage the winding coils).
5. During the period of operation must be kept fluid viscosity acc. to requirements defined in this Data Sheet - Operation Manual
6. In order to ensure failure free and safe operation the following must be checked:
  - condition of the electrical connection
  - proper working of the valve
  - cleanliness of the hydraulic fluid
7. Due to heating of electromagnet solenoid coils to high temp., the valve shall be placed in such way to eliminate the risk of accidental contact with solenoid during operation or to apply suitable covers acc. to PN-EN ISO 13732-1 and PN-EN 982
8. In order to ensure tightness of the directional valve block, one should take care of dimension of sealing rings and valve operation parameters given in this Data Sheet - Operation Manual
9. A person that operates the valve must be thoroughly familiar with this Data Sheet - Operation Manual.




## DIAGRAMS

### Diagrams for 3-position directional spool valves


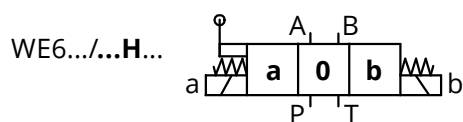
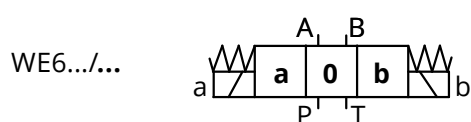


### Diagrams for 2-position directional spool valves


versions with positions a,0

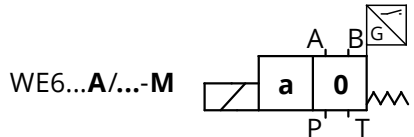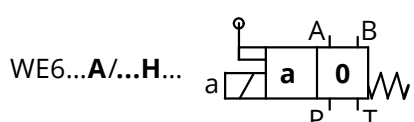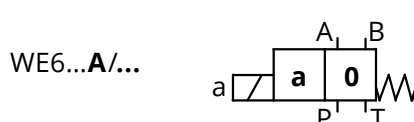

versions with positions 0, b

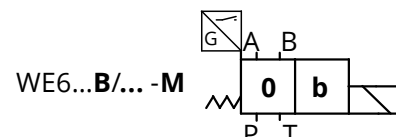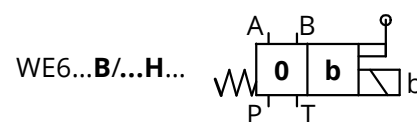


**Diagrams for spools**

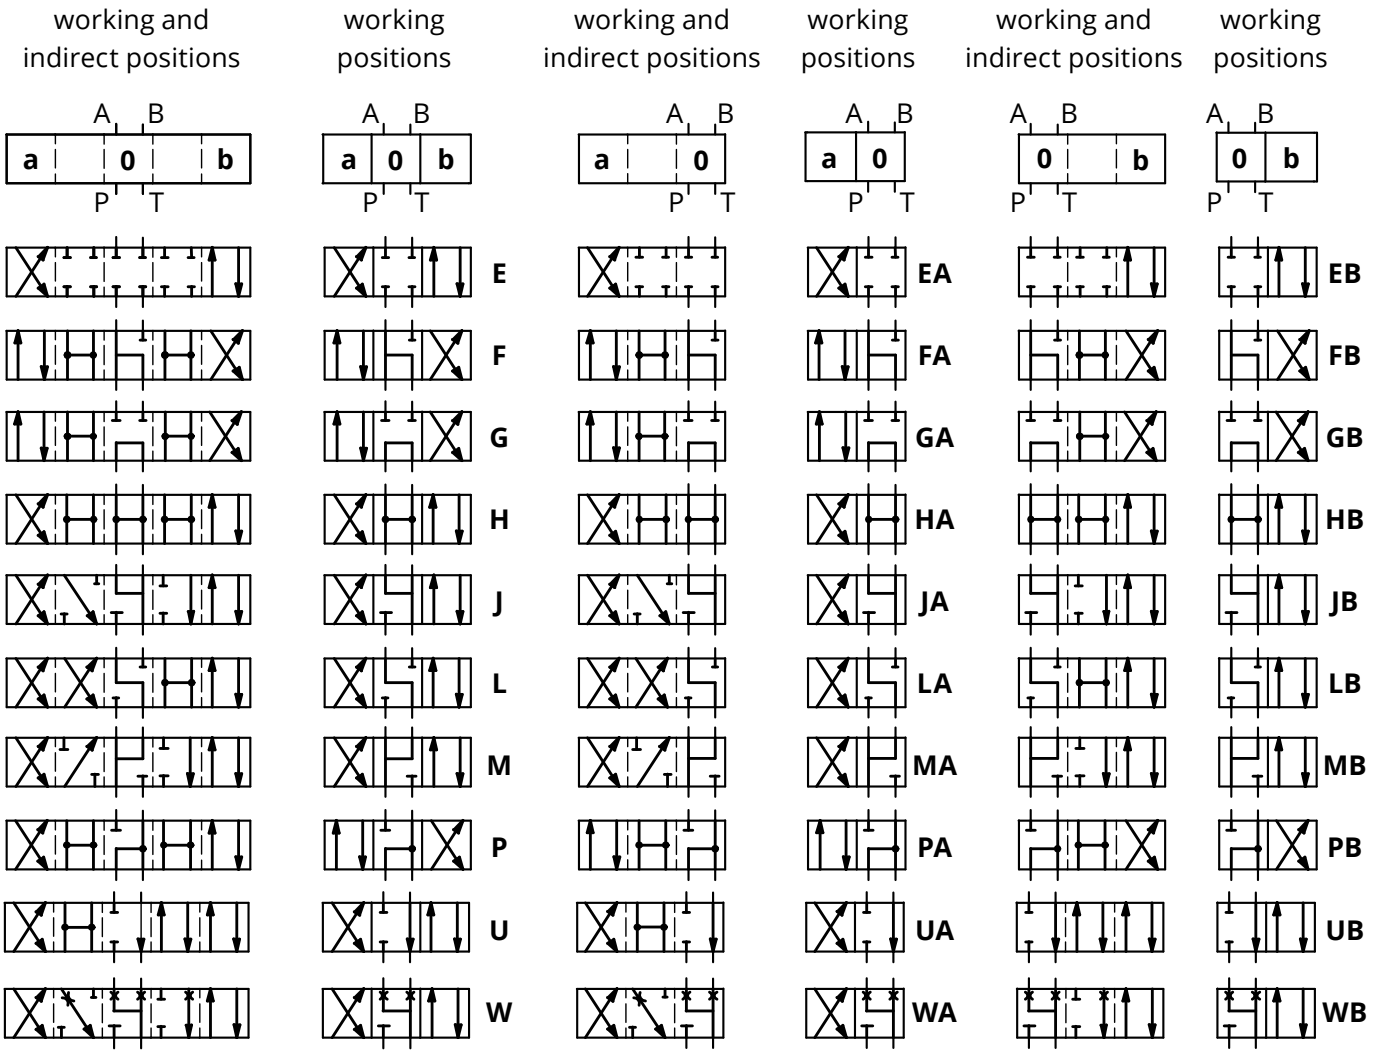

NOTE: Flow section in central position for spool **W** according to page 2

**Diagrams for 2 – position directional spool valves**

versions with positions **a, b**

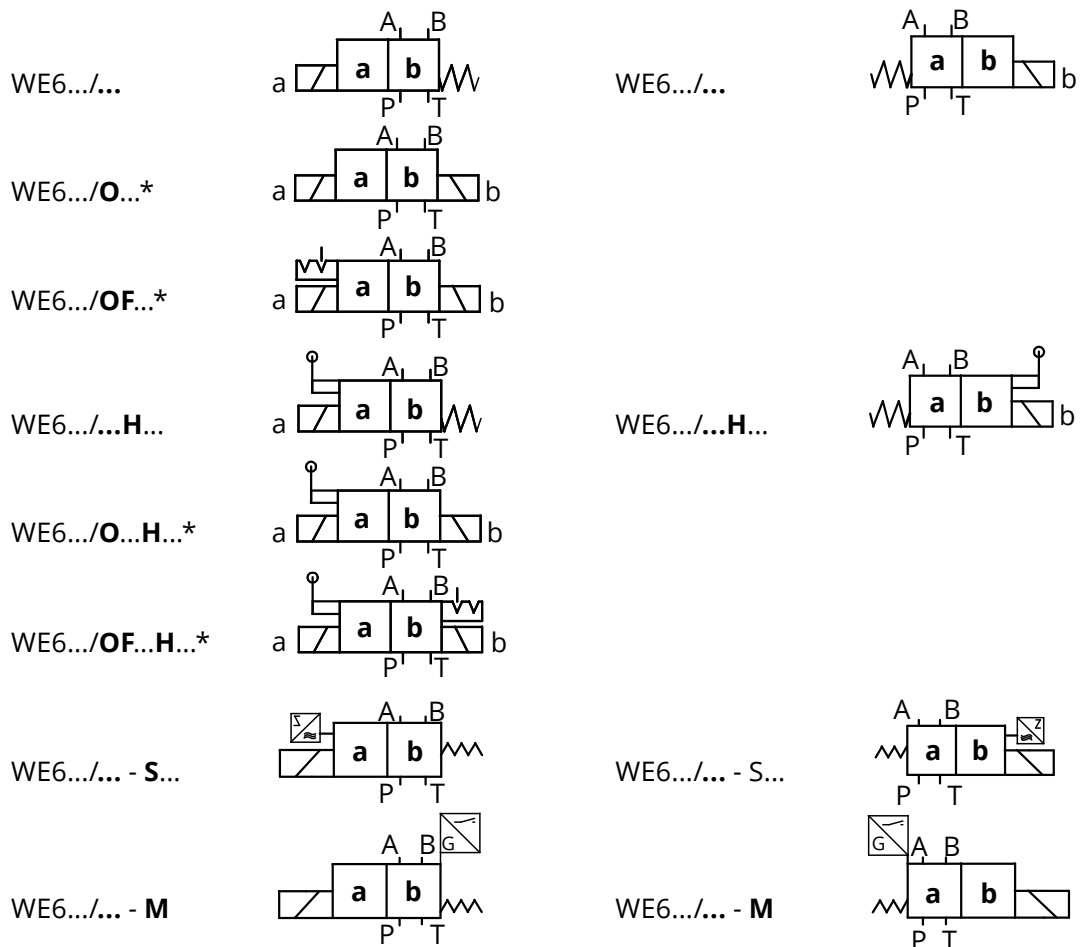

NOTE: (\*) – versions: WE6.../O...;.../OF...; .../O...H...; .../OF...H... only with spools – diagram **A, C, D**










**Diagrams for spools**

working and indirect positions



working positions

working and indirect positions



working positions

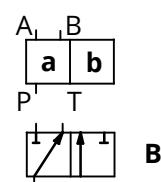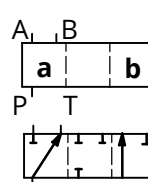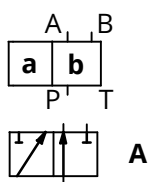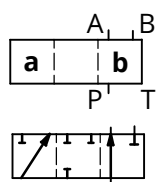



**C**



**D**



**D1**

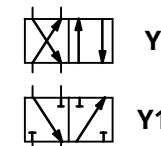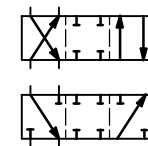


**Y**

**Y1**

## OVERALL AND CONNECTION DIMENSIONS

version WE6.../...Z4... (electrical connection type ISO 4400)

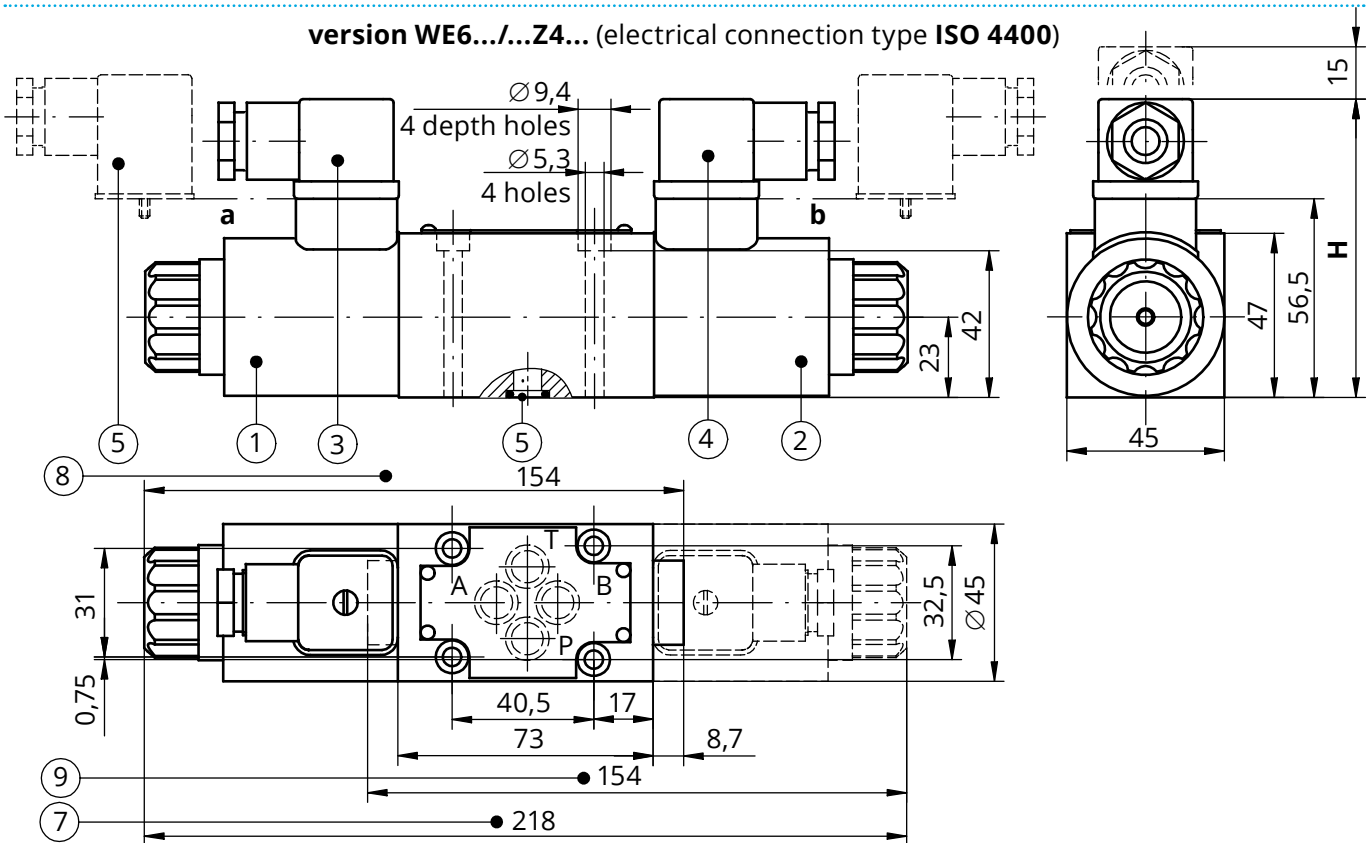


Option of connection Z4...	Control voltage	Dimension H
plug-in-connector <b>ISO 4400</b> (DIN 43650 - A)	<b>12 V DC, 4 V DC, 110 V DC</b>	86
plug-in-connector <b>ISO 4400</b> (DIN 43650 - A) with rectifier	<b>110 V AC, 220 V AC, 230 V AC</b>	93

**NOTES:**


- versions WE6... with **DC solenoids with other electrical connectors**, see page 7
- versions with **AC solenoids** with direct supply, see page 8

- 1 - Solenoid on side **a**
- 2 - Solenoid on side **b**
- 3 - Plug-in-connector on side **a** - **ISO 4400** type (DIN 43650 - A)
- 4 - Plug-in-connector on side **b** - **ISO 4400** type (DIN 43650 - A)
- 5 - Plug-in-connector - **ISO 4400** type (DIN 43650 - A) with rectifier
- 6 - **O-ring 9,2 × 1,8** - 4 pcs/set
- 7 - Directional spool valve dimension with **2 solenoids** on side **a, b**:
  - **3-position directional spool valve springs centered** (spool diagrams: **E, F, G, H, J, L, M, P, U, W** - according to page 4)
  - **2-position directional spool valve without return springs**
  - **2-position directional spool valve without springs and with detent** (spool diagrams: **A, C, D, D1** - according to page 5)
- 8 - Directional spool valve dimension with **1 solenoid** - on side **a**
  - 2-position springs centered (spool diagrams: **A, C, D, D1, EA, FA, GA, HA, JA, LA, MA, PA, UA, WA** - according to pages 4, 5)
- 9 - Directional spool valve dimension with **1 solenoid** - on side **b**
  - **2-position springs centered spool diagrams:** **B, Y, Y1, EB, FB, GB, HB, JB, LB, MB, PB, UB, WB** - according to pages 4, 5
- 10 - Porting pattern for directional spool valve - configuration of connection holes in accordance with the standard **ISO 4401** - identified by **ISO 4401-03-02-0-94** (nominal size **CETOP 03**) fixing screws **M5 × 50 - 10.9** in accordance with **PN - EN ISO 4762** - 4 pcs/set; tightening torque **Md = 9 Nm**
- 11 - Subplate surface required

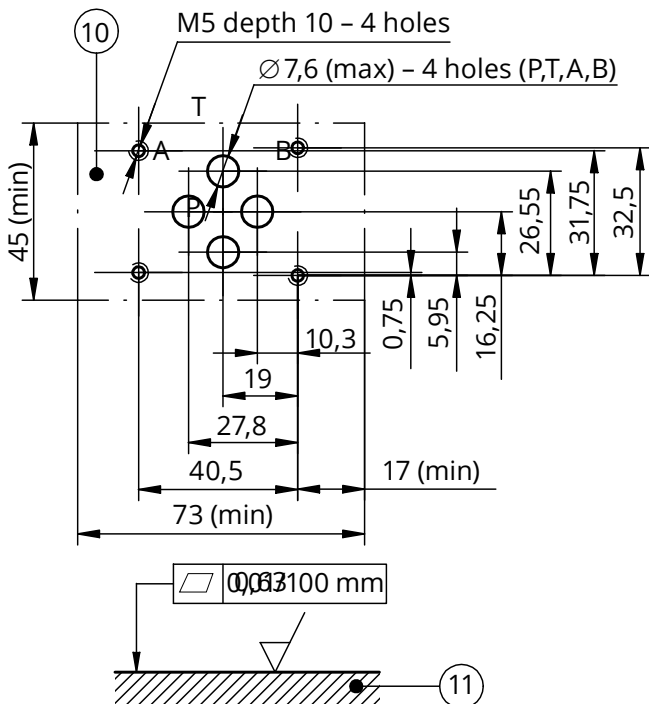

## OVERALL AND CONNECTION DIMENSIONS

versions: WE6.../...G12...J...; ...G24...J... (electrical connection type **AMP Junior Timer**)

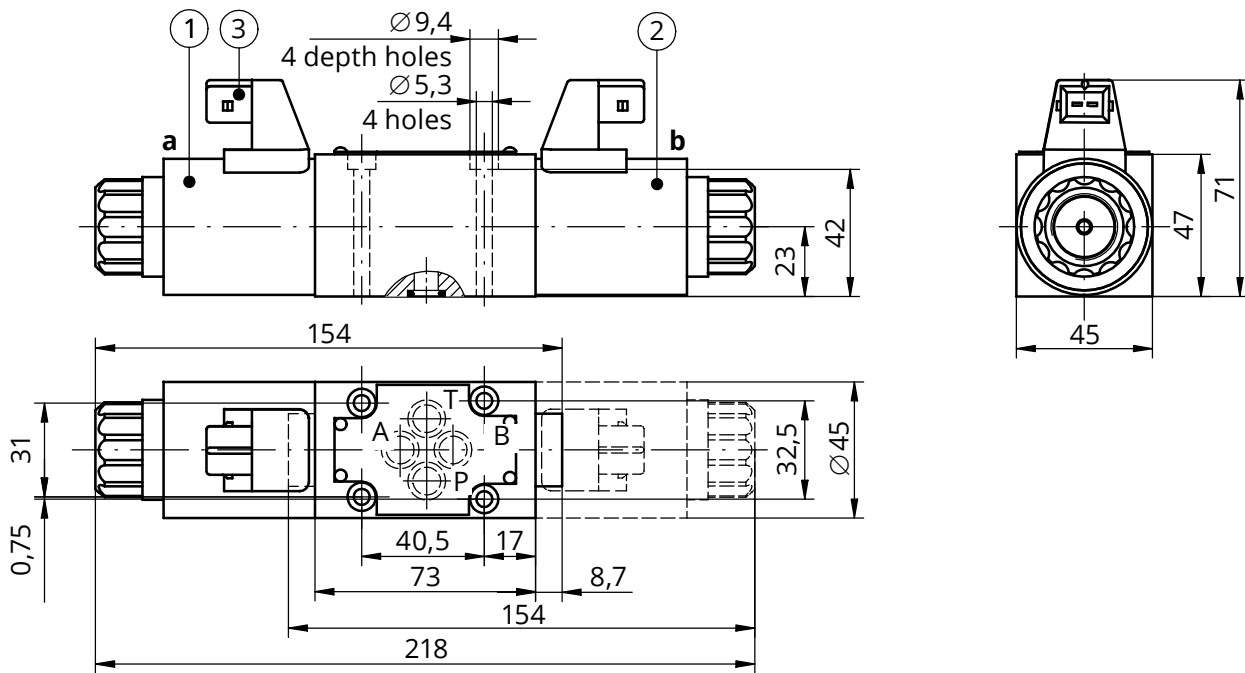


**NOTES:**

Description of other elements of the valve drawing; porting pattern and requirements of surface state of the subplate – as in version WE6.../...Z4..., see page 6

- 1 – Solenoid on side **a**
- 2 – Solenoid on side **b**
- 3 – Connector type **AMP Junior Timer male 2-pole** (plug-in-connectors not shown in the drawing must be ordered separately – Data Sheet **WK 499 963**)

version WE6.../...G24...D... (electrical connection type **Deutsch**)

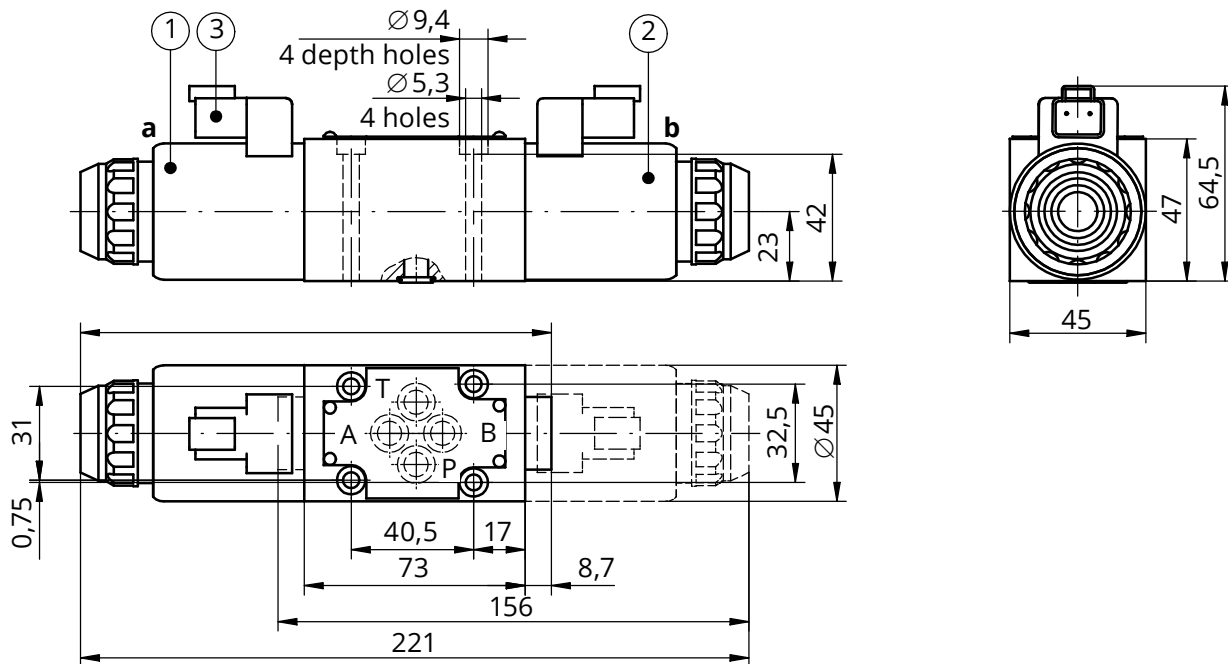


**NOTES:**

Description of other elements of the valve drawing; porting pattern and requirements of surface state of the subplate – as in version WE6.../...Z4..., see page 6

- 1 – Solenoid on side **a**
- 2 – Solenoid on side **b**
- 3 – **Deutsch DT04 - 2P** type connector (plug-in connectors **Deutsch DT06 - 2S** type not shown in the drawing must be ordered separately – Data Sheet **WK 499 963**)

## OVERALL AND CONNECTION DIMENSIONS

version WE6.../...W230-50...Z4... (AC solenoids; electrical connection type ISO 4400)

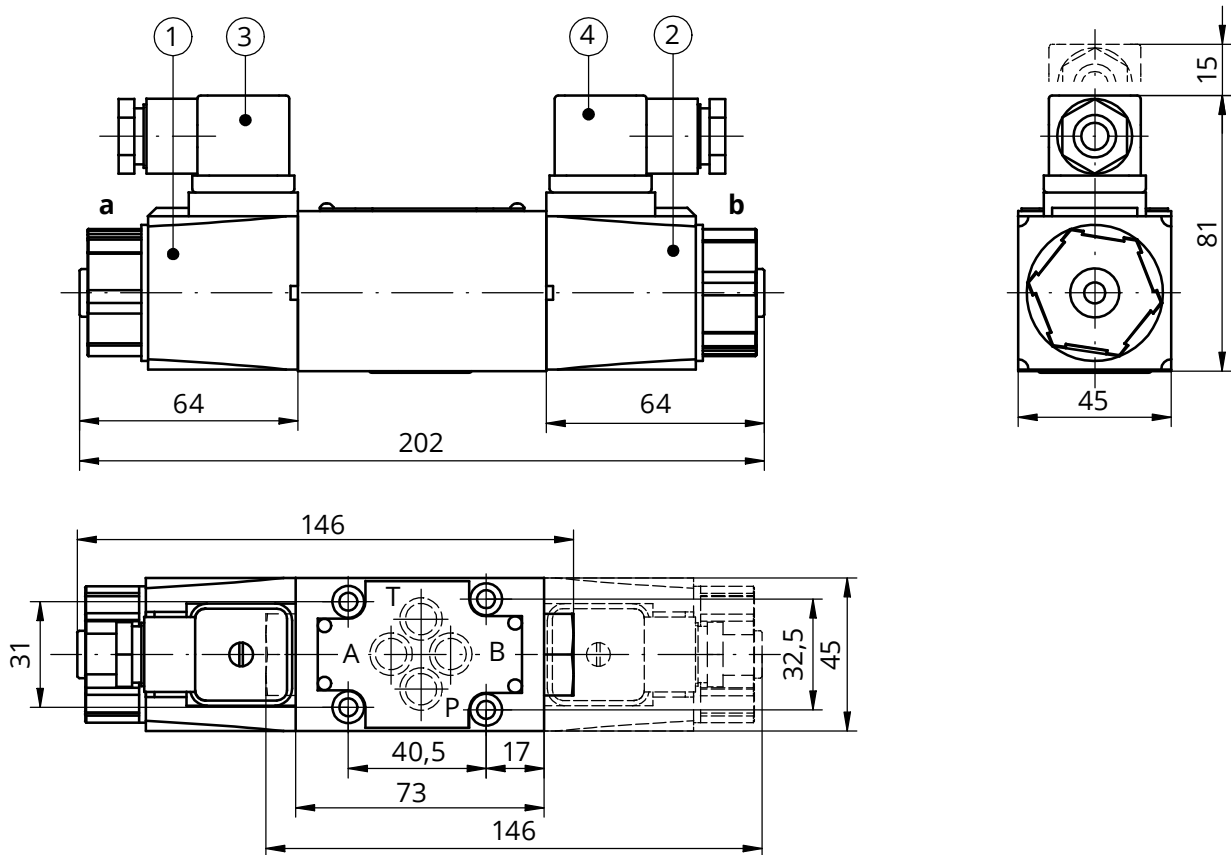

### NOTES:

- other dimensions, description of other elements of the valve drawing; porting pattern and requirements of the surface state of the subplate – as in version WE6.../...Z4... with DC solenoids, see page 6
- details of the WE6.../...W230 - 50...H Z4... version (with a manual control lever) – as in version WE6.../...H Z4... with DC solenoids, see page 9 – 11

- 1 – AC solenoid (with direct supply) from the **a** side
- 2 – AC solenoid (with direct supply) from the **b** side

### NOTE:


**simultaneous joining of two solenoids of the same valve should not be permitted (partial overriding of the valve can overheat and damage the winding coils)**

- 3 – Plug-in-connector on side **a** – type ISO 4400 (DIN 43650 – A)
- 4 – Plug-in-connector on side **b** – type ISO 4400 (DIN 43650 – A)



## OVERALL AND CONNECTION DIMENSIONS

3-position versions WE6.../...H Z4...; .../...HS Z4...  
 2-position versions WE6.../O...H Z4...; .../OF... H Z4...  
 WE 6.../O...HS Z4...; ... /OF...HS Z4...

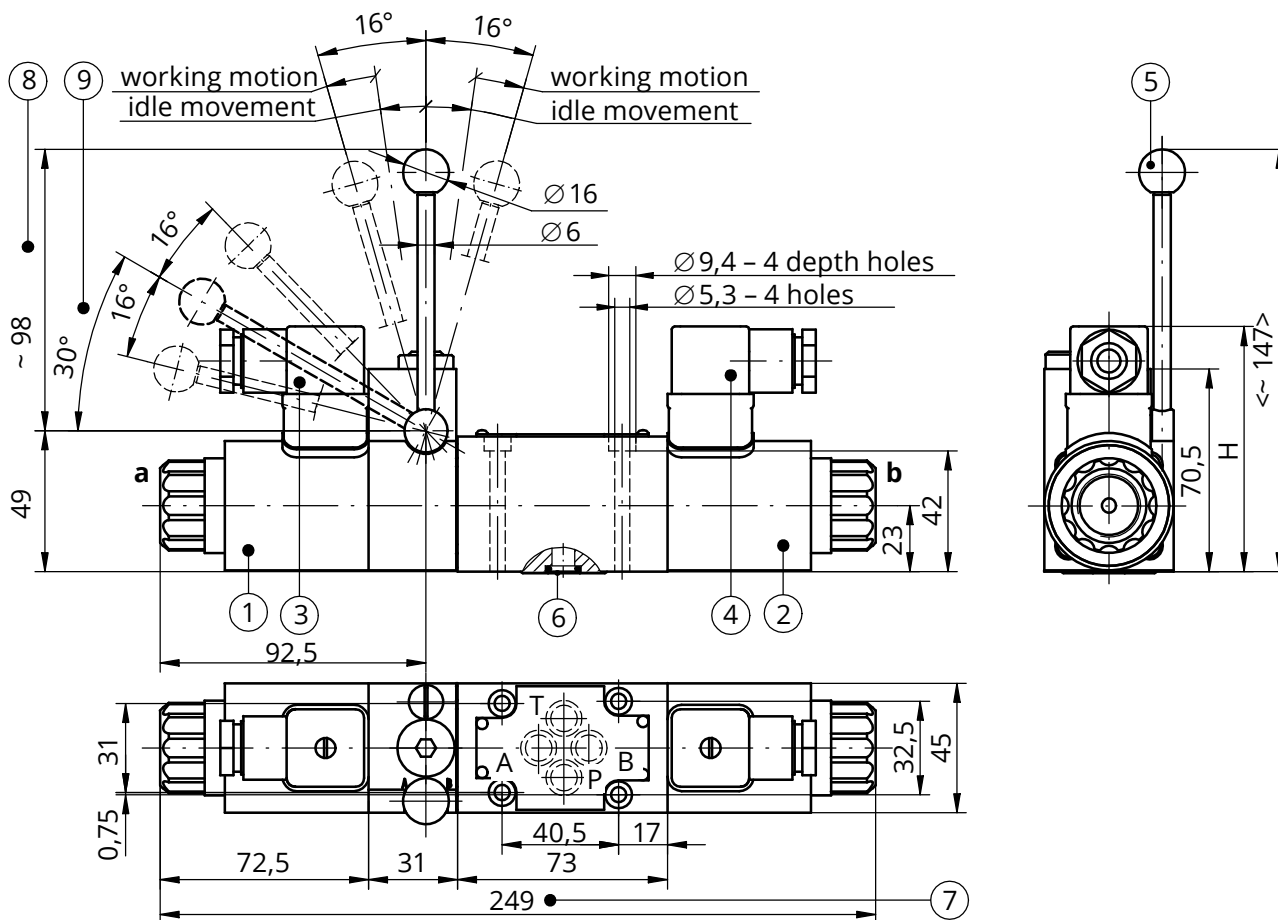

Option of connection <b>Z4...</b>	Control voltage	Dimension <b>H</b>
plug-in-connector <b>ISO 4400</b> (DIN 43650 - A)	<b>12V DC, 24V DC, 110V DC</b>	86
plug-in-connector <b>ISO 4400</b> (DIN 43650 - A) <b>with rectifier</b>	<b>110V AC, 220V AC, 230V AC</b>	93

**NOTES:**

- versions WE6.../...H... with other electrical connections, see page 11
- porting pattern and requirements of surface state of the subplate – as in version WE6.../...Z4..., see page 6

- 1 - Solenoid on side **a**
- 2 - Solenoid on side **b**
- 3 - Plug-in-connector on side **a** – type **ISO 4400** (DIN 43650 - A)
- 4 - Plug-in-connector on side **b** – type **ISO 4400** (DIN 43650 - A)
- 5 - Manual control lever
- 6 - O-ring **9,2 × 1,8** – 4 pcs/set
- 7 - Directional spool valve dimension with 2 solenoids on side **a, b**:


- 3-position directional spool valve springs centered versions WE6.../...H...; ...HS... (spool diagrams: **E, F, G, H, J, L, M, P, U, W** – according to page 4)
- 2-position directional spool valve without return springs versions WE6.../O...H...; .../O...HS...
- 2-position directional spool valve without springs and with detent versions WE6.../OF...H... .../OF...HS... (spool diagrams: **A, C, D** – according to page 5)
- 8 - Manual control lever positions in versions: WE6.../...H... WE6.../O...H... .../OF...H...
- 9 - Manual control lever positions in versions: WE6.../...HS... WE6.../O...HS... .../OF...HS...

**NOTES:**

The valve is switched by the manual control lever – item 5, return of the lever to the initial (neutral) state occurs automatically. After switching the valve by using the solenoid, the lever – item 5 remains inactive.

OVERALL AND CONNECTION DIMENSIONS

2-position versions WE6.../...H Z4...; ...HS Z4...

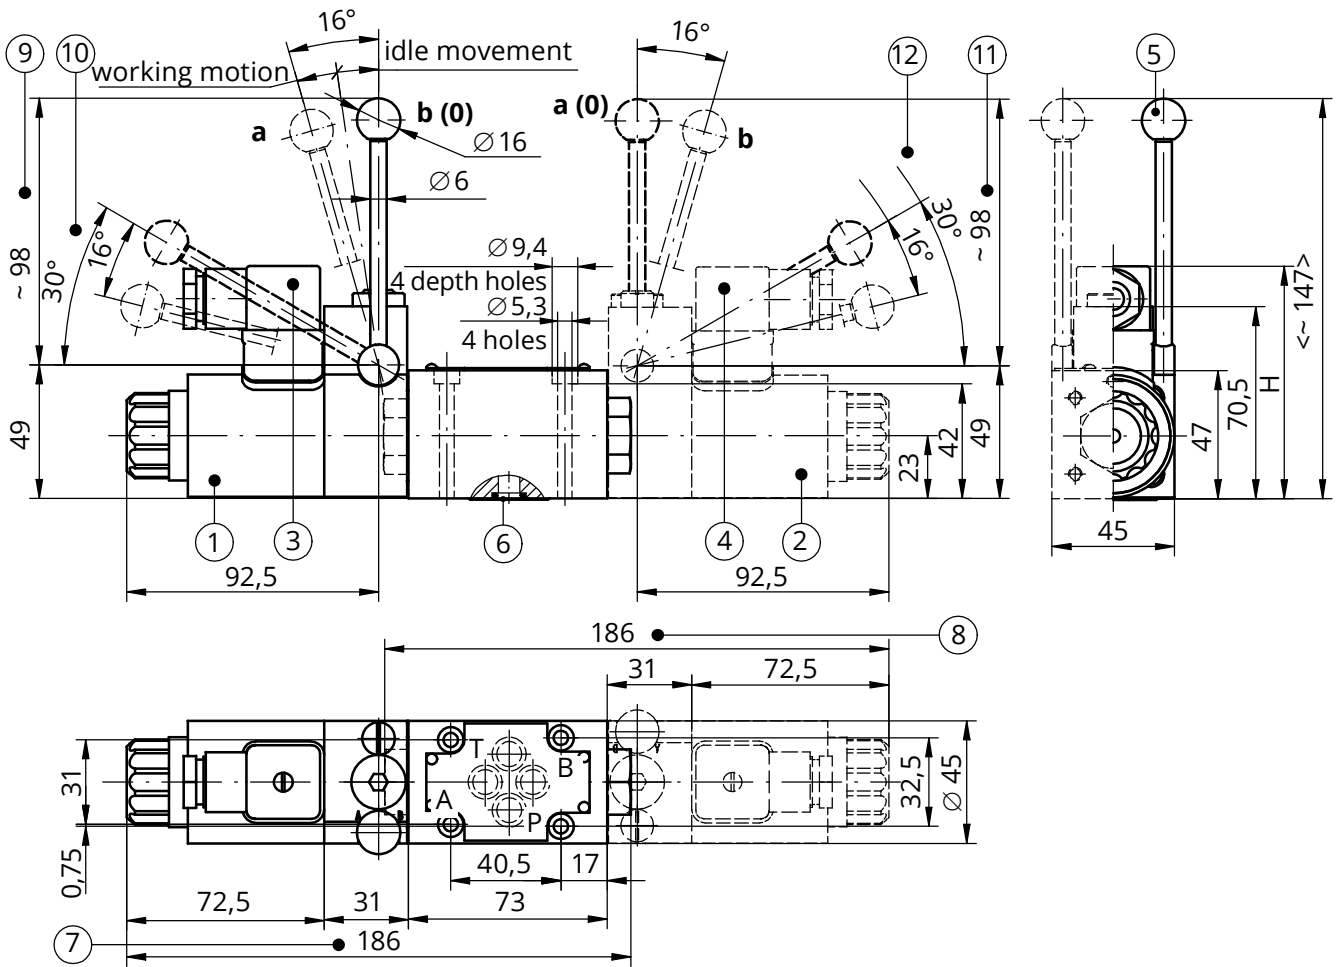

Option of connection Z4...	Control voltage	Dimension H
plug-in-connector ISO 4400 (DIN 43650 - A)	12V DC, 24V DC, 110V DC	86
plug-in-connector ISO 4400 (DIN 43650 - A) with rectifier	110V AC, 220V AC, 230V AC	93

NOTES:

- versions WE6.../...H... with other electrical connections, see page 11
- porting pattern and requirements of surface state of the subplate - as in version WE6.../...Z4..., see page 6


- 1 - Solenoid on side a
- 2 - Solenoid on side b
- 3 - Plug-in-connector on side a - type ISO 4400 (DIN 43650 - A)
- 4 - Plug-in-connector on side b - type ISO 4400 (DIN 43650 - A)
- 5 - Manual control lever
- 6 - O-ring 9,2 x 1,8 - 4 pcs/set
- 7 - Directional spool valve dimension with 1 solenoid on side a: **2-position with return spring** (spool diagrams: A, C, D, D1, EA, FA, GA, HA, JA, LA, MA, PA, UA, WA - according to pages 4, 5)
- 8 - Directional spool valve dimension with 1 solenoid - on side b, **2-position with return spring** (spool diagrams: B, Y, Y1, EB, FB, GB, HB, JB, LB, MB, PB, UB, WB - according to pages 4, 5)
- 9 - Manual control lever positions in versions: WE6.../...H... with 1 solenoid - on side a
- 10 - Manual control lever positions in versions: WE6.../...HS... with 1 solenoid - on side a
- 11 - Manual control lever positions in versions WE6.../...H... with 1 solenoid - on side b
- 12 - Manual control lever positions in versions: WE6.../...HS... with 1 solenoid - on side b

NOTES:

The valve is switched by the manual control lever - item 5, return of the lever to the initial (neutral) state occurs automatically. After switching the valve by using the solenoid, the lever - item 5 remains inactive.

## OVERALL AND CONNECTION DIMENSIONS

versions: **WE6.../...H...G12...J...; ... H...G24...J...** (electrical connection type **AMP Junior Timer**)

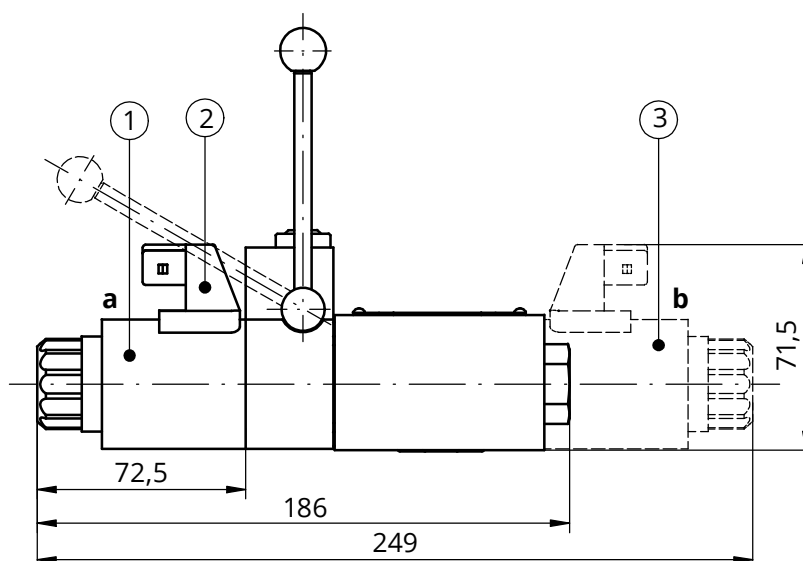


**NOTE:**

Other dimensions, description of elements of the valve drawing, porting pattern and requirements of surface state of the subplate – as in version WE6.../...H...Z4..., see page 7

- 1 – Solenoid on side **a**
- 2 – Solenoid on side **b**
- 3 – **2-poles male AMP Junior Timer** type connector (plug-in connectors not shown in the drawing must be ordered separately – Data Sheet **WK 499 963**)

**version WE6.../...H...G24...D...** (electrical connection type **Deutsch**)

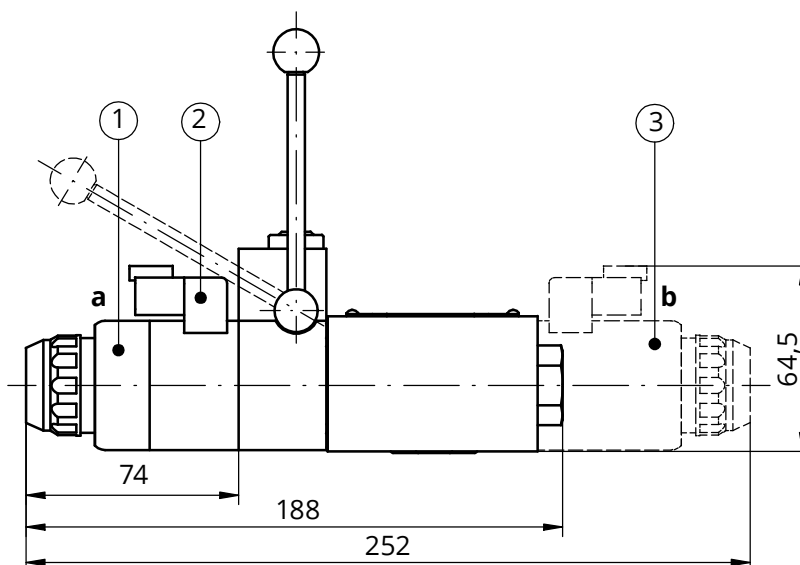

**NOTE:**

Other dimensions, description of elements of the valve drawing, porting pattern and requirements of surface state of the subplate – as in version E6.../...H...Z4..., see page 7


- 1 – Solenoid on side **a**
- 2 – Solenoid on side **b**
- 3 – **Deutsch DT04 – 2P** type connector (plug-in connectors **Deutsch DT06 – 2S** type not shown in the drawing must be ordered separately – Data Sheet **WK 499 963**)

## PERFORMANCE CURVES

measured at viscosity  $\eta = 41 \text{ mm}^2/\text{s}$  and temperature  $t = 50 \text{ }^\circ\text{C}$

### Flow resistance curves


characteristic curves  $\Delta p(Q)$  for directional spool valve type **WE6...** for various spool types

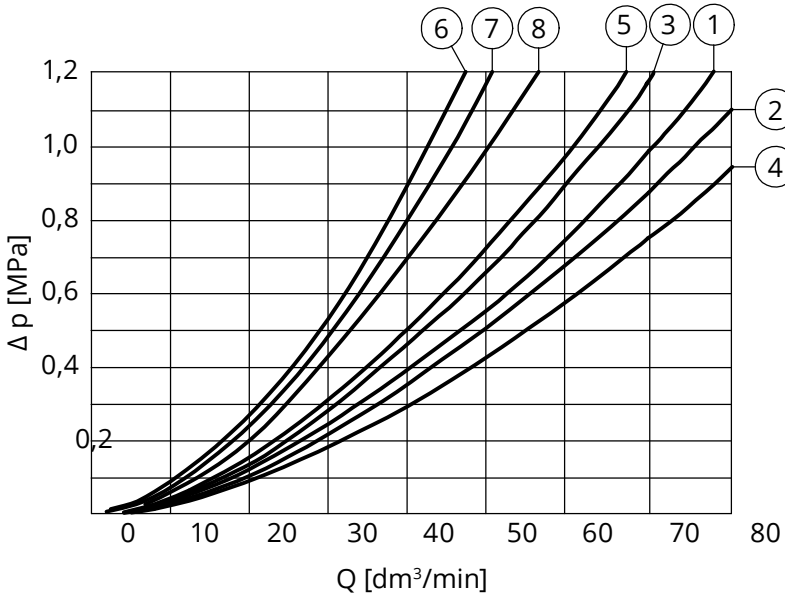

spool symbol	performance diagram number			
	flow direction			
shifted positions diagrams according to pages 4, 5	P→A	P→B	A→T	B→T
	A, B	3	3	-
C	1	1	3	1
D, Y	5	5	3	3
E	3	3	1	1
F	2	3	3	5
G	7	7	6	6
H	2	4	2	2
J	1	1	2	1
L, W	1	1	2	2
M	2	4	3	3
P	2	3	3	5
U	3	1	3	3
D1	5	-	-	5
Y1	-	5	5	1
central position diagram according to page 4	flow direction			
	P→A P→B	P→T	A→T B→T	B→A
G	-	8	-	-

### Operating limits

characteristic curves **p-Q** for directional spool valve type **WE6...** with **DC solenoids** for various spool types

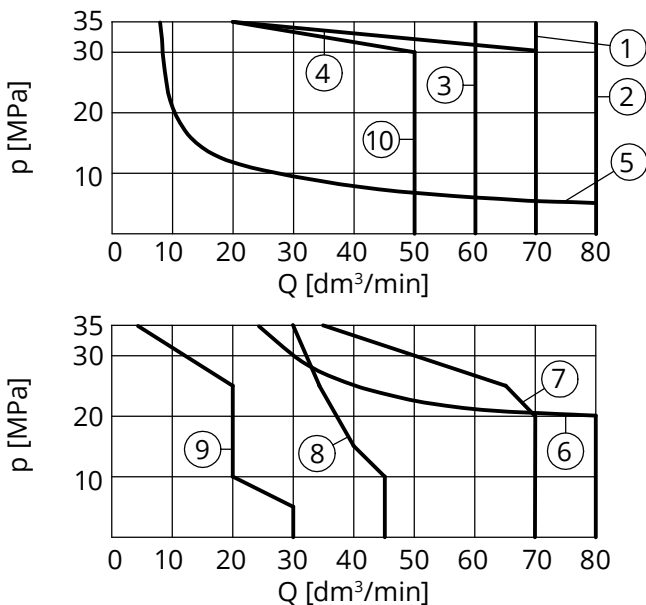

spool symbol diagrams according to pages 4, 5	performance diagram number
E	1
H, M, L, U, C/OF, D/OF	2
C/O, D/O	3
C, D, Y	4
A, B	5
A/O	6
J	7
G	8
F, P	9
D1, Y1	10

### NOTES:

Above operating limits are related to symmetrical flow through all ports i.e. if the oil flows from port **P** to port **A**, then the same flow rate is from port



**B** to port **T** (applied to directional control valves with 4 service ports). Degree of asymmetry affects adversely the parameters.

## PERFORMANCE CURVES

measured at viscosity  $\eta = 41 \text{ mm}^2/\text{s}$  and temperature  $t = 50 \text{ }^\circ\text{C}$

### Operating limits

characteristic curves **p-Q** for directional spool valve type **WE6...** with AC **solenoids with direct supply** for various spool types

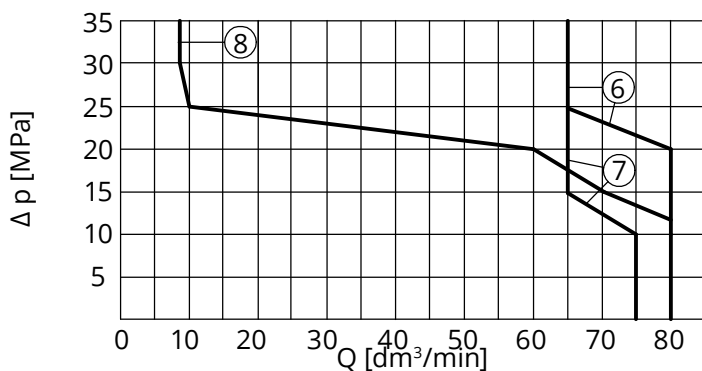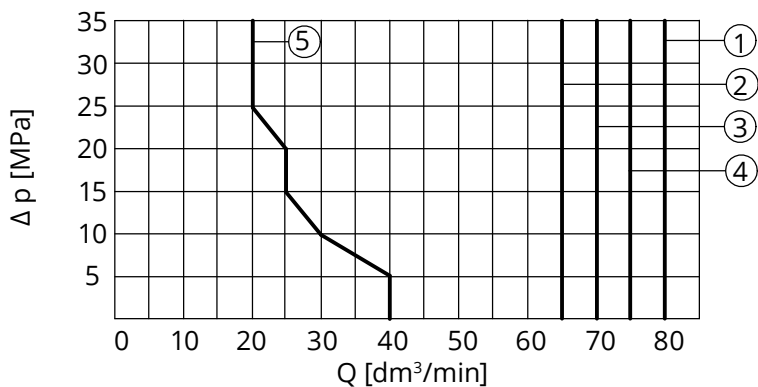

spool symbol diagrams according to pages 4, 5	performance diagram number
C, D, H, D/O, C/OF, D/OF	1
W	2
E	3
L	4
G	5
J	6
M	7
A	8

#### NOTES:

Above operating limits are related to symmetrical flow through all ports i.e. if the oil flows from port **P** to port **A**, then the same flow rate is from port

**B** to port **T** (applied to directional control valves with 4 service ports). Degree of asymmetry affects adversely the parameters.

## ACCESSORIES


### Spool position switch type S

Additional technical data


<b>Inductive switch type S</b>		
<b>Versions</b>	<b>PNP inductive proximity switches normally closed - NC, normally opened - NO</b>	
<b>Range of supply voltage for switch</b>	<b>10 - 30V DC</b>	
<b>Max load current</b>	<b>200 mA</b>	
<b>Connection type of switch</b>	<b>switch with M12×1 external thread; male connection; 4 contacts (pins)</b>	
<b>Degree of protection</b>	<b>IP 65</b>	
<b>Weight</b>	<b>directional valve with 1 solenoid and 1 switch</b>	2,1 kg
	<b>directional valve with 2 solenoids and 1 switch</b>	2,7 kg
	<b>directional valve with 2 solenoids and 2 switches</b>	3,3 kg

Diagrams of electrical connection of inductive switch type S


normally open (NO) - type S1

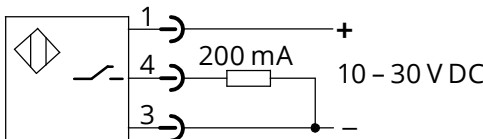

normally closed (NC) - typ S2

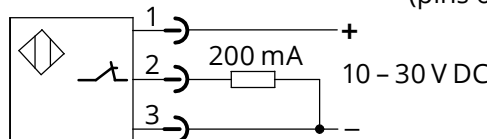

contact allocation (pins of switch connector)



Diagrams for directional control valves and initial positions of switches

initial position of inductive switch type S depending on the spool position 0 - off neutral state on output contact (NO - contact 4; NC - contact 2) 1 - on state on uotput contact (NO - contact 4; NC - contact 2)		diagram for directional control valve
3-position directional control valve		
<p>position monitored <b>a</b> and <b>b</b> switch type <b>S1</b></p>	<p>position monitored <b>0</b> switch type <b>S1</b></p>	
<p>switch type <b>S2</b></p>	<p>switch type <b>S2</b></p>	

ACCESSORIES

Spool position switch type S


initial position of inductive switch depending on the spool position		diagram for directional control valve
<b>2-position versions WE6...A... (positions: a, 0) solenoid and switch on side a</b>		
<p>position monitored <b>a</b></p>	<p>position monitored <b>0</b></p>	
<b>2-position versions WE6...B... (positions: 0, b) solenoid and switch on side b</b>		
<p>position monitored <b>0</b></p>	<p>position monitored <b>b</b></p>	
<b>2-position versions WE6A...; ...C...; ...D...; .../O...; .../OF... switch on side a</b>		
<p>position monitored <b>a</b></p>	<p>position monitored <b>b</b></p>	
<b>2-position versions WE6B...; ...Y... switch on side b</b>		
<p>position monitored <b>a</b></p>	<p>position monitored <b>b</b></p>	

ACCESSORIES


Spool position switch type S

Overall dimensions


version with 2 solenoids and 2 switches

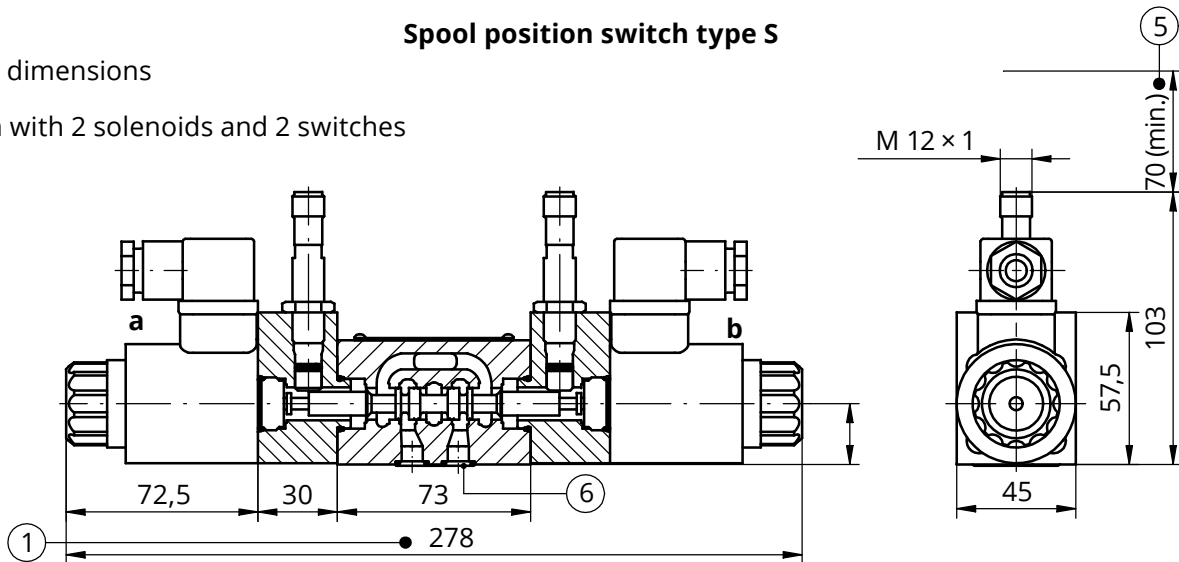

version with 1 solenoid and 1 switch

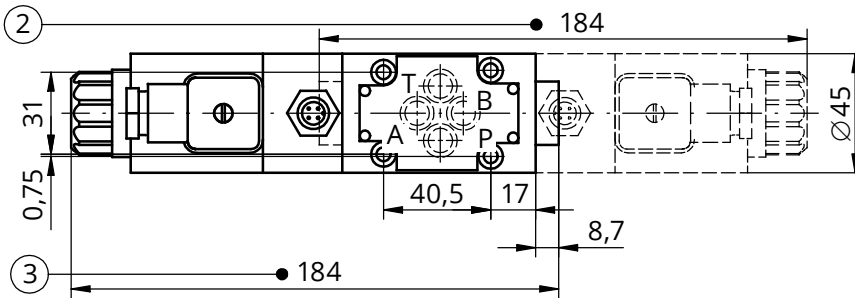

version with 2 solenoids and 1 switch

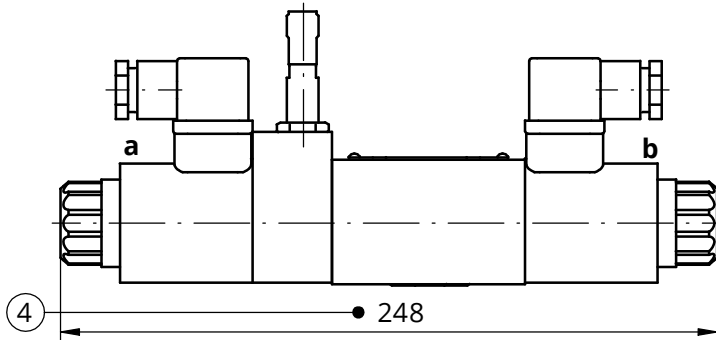

NOTES:

Directional control valve with spool position switch is adjusted. Any adjustments may be made only by the manufacturer. In case of a faulty switch or valve complete directional control valve must be changed.

Requirements of surface state of the subplate – according to page 6

- 1 – Dimension of directional control valve with **2 solenoids** – on side **a, b** and **2 position switches**
  - **3-position, springs centered** versions WE6.../...S1...; ...S2... (spool diagrams: **E, F, G, H, J, L, M, P, U, W** – on page 4)
- 2 – Dimension of directional control valve with **1 solenoid** – on side **a** and **1 position switch**
  - **2-position, with return spring** versions WE6.../...S1...; ...S2... (spool diagrams: **A, C, D, D1, EA, FA, GA, HA, JA, LA, MA, PA, UA, WA** – on pages 4, 5)
- 3 – Dimension of directional control valve with **1 solenoid** – on side **b** and **1 position switch**
  - **2-position, with return spring** versions WE6.../...S1... ...S2... (spool diagrams: **B, Y, Y1, EB, FB, GB, HB, JB, LB, MB, PB, UB, WB** – on pages 4, 5)
- 4 – Dimension of directional control valve with **2 solenoids** – on side **a, b** and **1 position switch** on side **a**
  - **2-position, without spring return** versions WE6.../O...S1...; ...S2...
  - **2-position, without spring return, with detent** versions WE6.../OF...S1...; ...S2... (spool diagrams: **A, C, D, D1** – on page 5)
- 5 – Distance for mounting plug-in-connector and cable of switch (plug-in-connectors not showed in the drawing must be ordered separately according to data sheet **WK 499 963**)
- 6 – **O - ring 9,2 × 1,8** – 4pcs/set (**P, T, A, B**)



## ACCESSORIES


### Spool position switch type M

(only for 2-position versions with return spring)

Additional technical data

<b>Inductive switch type M</b>	
	<b>czujnik z 2 alternatywnymi wyjściami typu PNP:</b> normally closed – contact 2 normally open – contact 4
<b>Range of supply voltage for switch</b>	<b>20 – 32 V DC</b>
<b>Max load current</b>	<b>400 mA</b>
<b>Connection type of switch</b>	<b>switch with M12×1 external thread; 4 contacts (pins)</b>
<b>Degree of protection</b>	<b>IP 65</b>
<b>Weight</b> (directional valve with switch)	1,8 kg

Diagrams of electrical connection of inductive switch type M

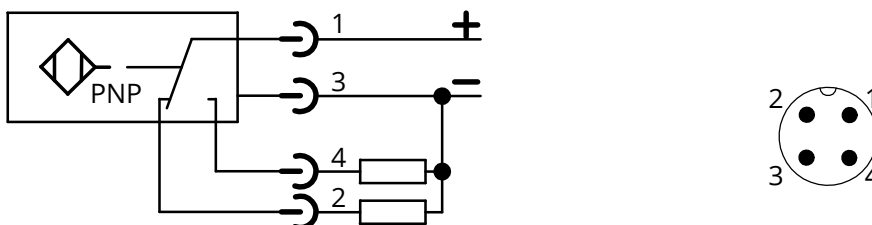

Diagrams for directional control valves and initial positions of switches

<b>initial position of inductive switch type M depending on the spool position</b> 0 – off neutral state on output contact 1 – on state on uoutput contact		<b>diagram for directional control valve</b>
<b>2-position versions WE6...A... (positions: a, 0)</b> <b>solenoid on side a and switch on side b</b>		
position monitored a	position monitored 0	
<b>2-position versions WE6...B... (positions: 0, b)</b> <b>solenoid on side b and switch on side a</b>		
position monitored 0	position monitored b	

ACCESSORIES

Spool position switch type M

(only for 2-position versions with return spring)



Diagrams for directional control valves and initial positions of switches

initial position of inductive switch type M depending on the spool position 0 - off neutral state on output contact 1 - on state on output contact		diagram for directional control valve
<b>2-position versions WE6A...; ...C...; ...D...; ...D1...</b> switch on side b		
<p style="text-align: center;">position monitored a</p>	<p style="text-align: center;">position monitored 0</p>	
<b>2-position versions WE6B...; ...Y...; ...Y1...</b> switch on side a		
<p style="text-align: center;">position monitored 0</p>	<p style="text-align: center;">position monitored b</p>	

## ACCESSORIES

## Spool position switch type M

Overall dimensions

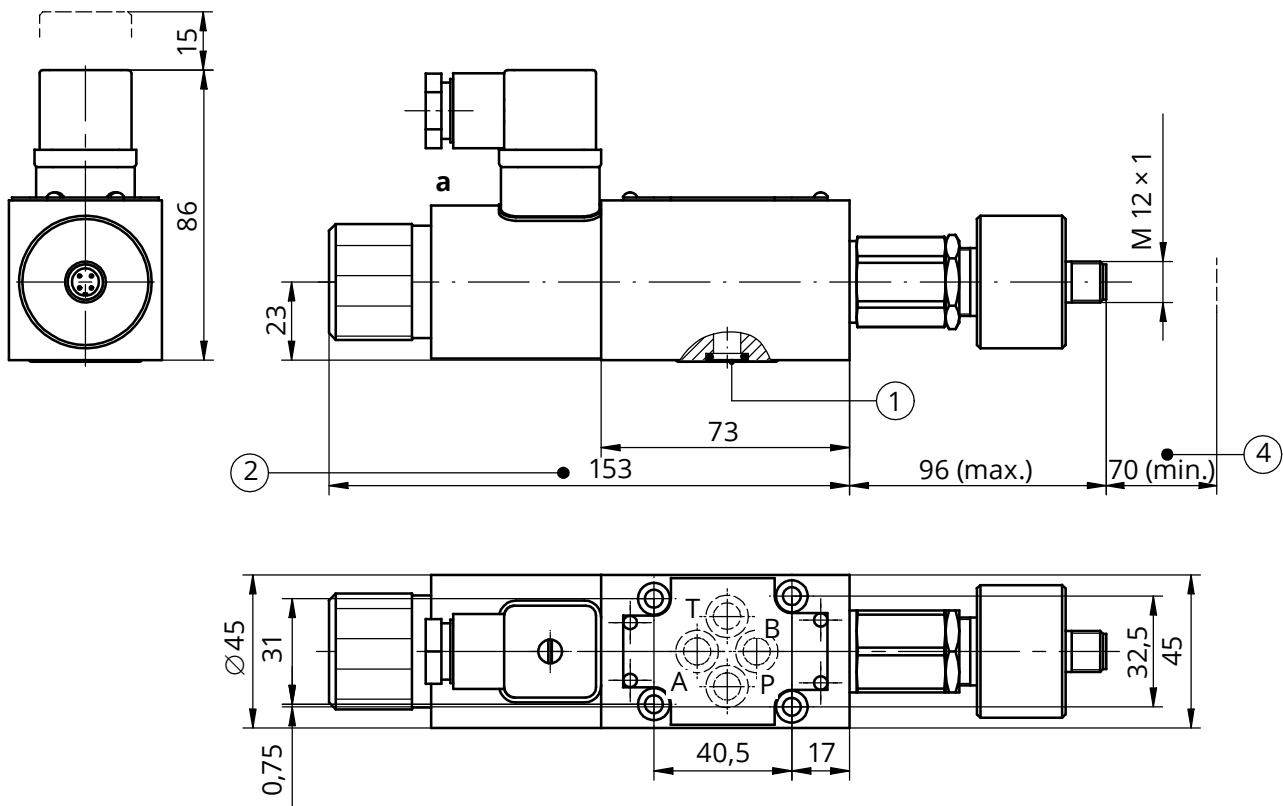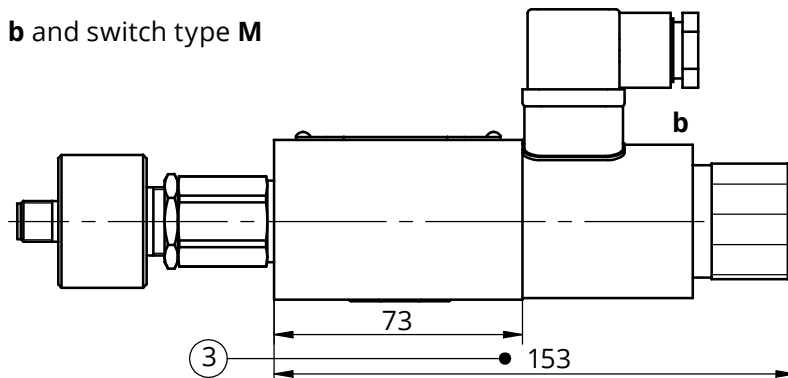version with solenoid on side **a** and switch type **M**version with solenoid on side **b** and switch type **M**

Requirements of surface state of the subplate – according to page 6

## NOTES:

Directional control valve with spool position switch is adjusted. Any adjustments may be made only by the manufacturer.

In case of a faulty switch or valve complete directional control valve must be changed.

- 1 – O-ring 9,2 × 1,8 – 4 pcs/set (P, T, A, B)
- 2 – Dimension of directional control valve **2-position, with return spring** with **1 solenoid** – on side a and switch type **M** (spool diagrams: **A, C, D, D1, EA, FA, GA, HA, JA, LA, MA, PA, UA, WA** – on page 4, 5)
- 3 – Dimension of directional control valve **2-position, with return spring** with **1 solenoid** – on side b and switch type **M** (spool diagrams: **B, Y, Y1, EB, FB, GB, HB, JB, LB, MB, PB, UB, WB** – on page 4, 5)
- 4 – Distance for mounting plug-in-connector and cable of switch (plug-in-connectors not showed in the drawing must be ordered separately according to data sheet **WK 499 963**)

## HOW TO ORDER



**Number of service ports**

**3-way** – only for spools A, B = **3**  
**4-way** – for the other spools = **4**

**Nominal size (NS)**

**NS6** = **6**

**Spool symbol**

**spool diagrams** – according to **page 4, 5**

**Series number**

(30 – 39) – connection and installation dimensions unchanged = 3X  
**series 32** = **32**

**Spool positioning**

**spring centering = no designation**

without springs return (only fo spools **A, C, D**) = O  
 without springs return with detent (only fo spools **A, C, D**) = OF

**Control voltage for solenoids**

12V DC = G12  
**24V DC** = **G24**  
 110V DC = G110  
 110V AC 50Hz (plug-in-connector with rectifier) = W110R  
 220V AC 50Hz (plug-in-connector with rectifier) = W220R  
**230V AC 50Hz (plug-in-connector with rectifier) = W230R**  
 230V AC 50 Hz (direct supply with AC current) = W230-50

**Manual override**

**solenoids with manual override** = **N**  
 solenoids without manual override  
 (only for version with inductive switch type M) = no designation

**Manual lever control**


**no manual control lever** = **no designation**  
 with a manual control lever psitioned vertically = H  
 with a manual control lever psitioned at an angle = HS

**Electrical connection**

**plug-in-connector type ISO 4400 (DIN 43650 – A) without LED = Z4**  
 plug-in-connector type ISO 4400 with LED = Z4L  
 withput plug-in-connector, with 2-poles male **AMP Junior Timer** type connector  
 (exists for ...**G12**... and ...**G24**... options only) = J  
 withput plug-in-connector, with DEUTSCH type connector  
 (exists for ...**G24**... option only) = D

**Throttle insert** (in port P)

**without throttle insert = no designation**  
 throttle insert Ø 0,8 = B 08  
 throttle insert Ø 1,0 = B 10  
 throttle insert Ø 1,2 = B 12

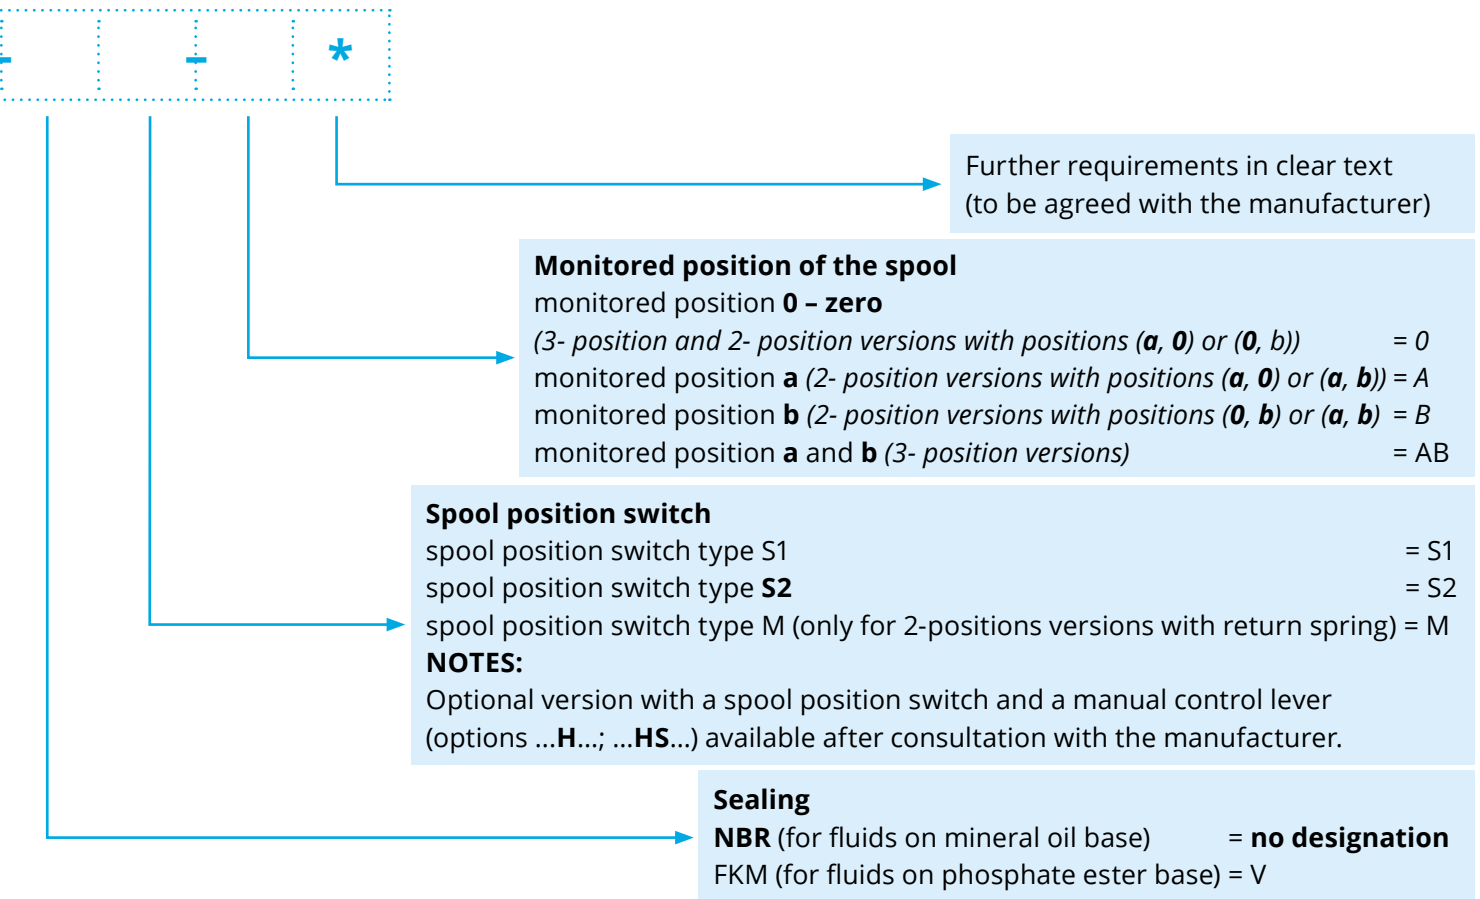


## NOTES:

Directional spool valve should be ordered according to the above coding.

**The symbols in bold are preferred versions in short delivery time.**

Coding example: 4WE6 E - 32/G24 N Z4 B08 S1 - AB

## EXAMPLE OF APPLICATION IN HYDRAULIC SYSTEM

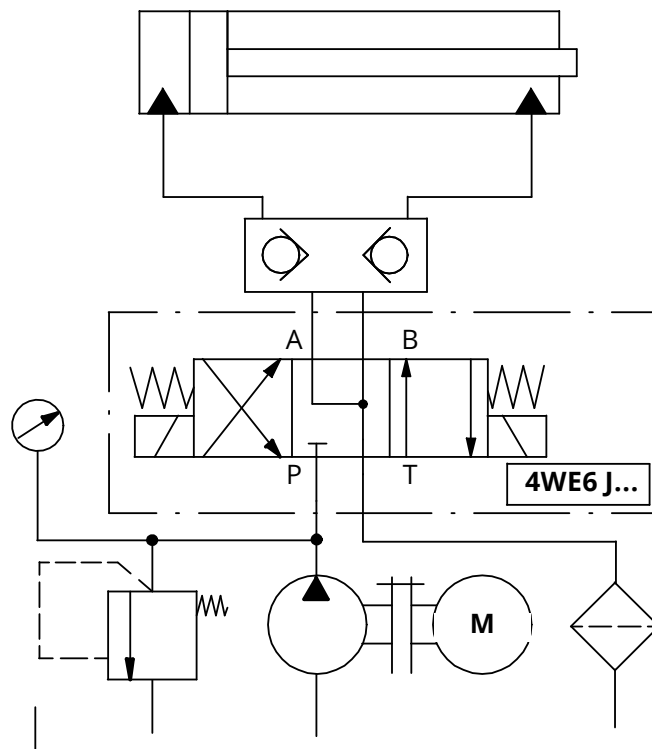

### SUBPLATES AND FIXING SCREWS

Subplates must be ordered according to catalogue sheet **WK 496 480**. Subplate symbols:

G 341/01 – threaded connections G 1/4

**G 342/01** – threaded connections **G 3/8**

G 502/01 – threaded connections G 1/2

G 341/02 – threaded connections M14 × 1,5

G 342/02 – threaded connections M16 × 1,5

Subplates and screws fixing directional valve

**M5 × 50 – 10,9**

in accordance with **PN – EN ISO 4762** – 4 pcs/set) must be ordered separately.

Tightening torque **Md = 9 Nm**

**The subplate symbol in bold is the preferred version available in short delivery time.**